



ROCKCURE



EPOXY RESIN

REGULAR PLANT

PART A

HOW TO USE :

- Make sure the surface is dust and moisture free.
- Mix 2 parts of resin and 1 part hardener as per stoichiometric ratio i.e. 100 Kg : 50 Kg.
- Mix well before pouring onto slabs.
- Leave it for two hours in heat.

SAFETY INSTRUCTIONS :

1. Keep it away from eyes & skin.
2. Keep it protected from moisture.
3. Store in cool place.
4. Wear gloves and glasses while applying.

HAZARD STATEMENT(S)

H314-H411

PRECAUTIONARY STATEMENT(S)

P280-P273-P264-P304+P340+P310-P301+P310+P330+P331-P305+P351+P338+P310-P405-P501



Manufactured By :

RAJ SPIRIT SUPPLIERS

H1-105, Udhog Vihar, Riico Industrial Area
Sukher, Udaipur, Rajasthan

**MIXING
RATIO**

2 : 1

Batch :

Mfg. Dt. :


Net Weight :

M.R.P. :

(INCLUSIVE OF ALL TAXES)

For Professional & Industrial Use only

MADE IN INDIA

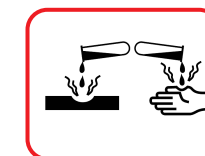



ROCKCURE



EPOXY RESIN

MANNUAL 1011

PART A

HOW TO USE :

- Make sure the surface is dust and moisture free.
- Mix 2 parts of resin and 1 part hardener as per stiochiometric ratio i.e.100 Kg : 50 Kg.
- Mix well before pouring onto slabs.
- Leave it for two hours in heat.

SAFETY INSTRUCTIONS :

1. Keep it away from eyes & skin.
2. Keep it protected from moisture.
3. Store in cool place.
4. Wear gloves and glasses while applying.

HAZARD STATEMENT(S)

H314-H411

PRECAUTIONARY STATEMENT(S)

P280-P273-P264-P304+P340+P310-
P301+P310+P330+P331-P305+
P351+P338+P310-P405-P501



Manufactured By :

R **RAJ SPIRIT
SUPPLIERS**

H1-105, Udhyog Vihar, Riico Industrial Area
Sukher, Udaipur, Rajasthan

**MIXING
RATIO** **2 : 1**

Batch :

Mfg. Dt. :


Net Weight :

M.R.P. :

(INCLUSIVE OF ALL TAXES)

For Professional & Industrial Use only

MADE IN INDIA

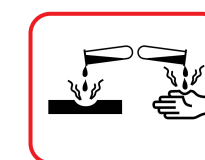



ROCKCURE



EPOXY RESIN

UV

PART A

HOW TO USE :

- Make sure the surface is dust and moisture free.
- Mix 2 parts of resin and 1 part hardener as per stoichiometric ratio i.e. 100 Kg : 50 Kg.
- Mix well before pouring onto slabs.
- Leave it for two hours in heat.

SAFETY INSTRUCTIONS :

1. Keep it away from eyes & skin.
2. Keep it protected from moisture.
3. Store in cool place.
4. Wear gloves and glasses while applying.

HAZARD STATEMENT(S)

H314-H411

PRECAUTIONARY STATEMENT(S)

P280-P273-P264-P304+P340+P310-
P301+P310+P330+P331-P305+
P351+P338+P310-P405-P501



Manufactured By :

R **RAJ SPIRIT
SUPPLIERS**

H1-105, Udhog Vihar, Riico Industrial Area
Sukher, Udaipur, Rajasthan

**MIXING
RATIO** **2 : 1**

Batch :

Mfg. Dt. :


Net Weight :

M.R.P. :

(INCLUSIVE OF ALL TAXES)

For Professional & Industrial Use only

MADE IN INDIA

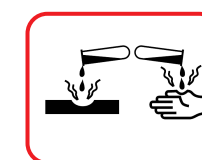



ROCKCURE



HARDENER

REGULAR PLANT

PART B - 50%

HOW TO USE :

- Make sure the surface is dust and moisture free.
- Mix 2 parts of resin and 1 part hardener as per stoichiometric ratio i.e. 100 Kg : 50 Kg.
- Mix well before pouring onto slabs.
- Leave it for two hours in heat.

SAFETY INSTRUCTIONS :

1. Keep it away from eyes & skin.
2. Keep it protected from moisture.
3. Store in cool place.
4. Wear gloves and glasses while applying.

HAZARD STATEMENT(S)

H314-H411

PRECAUTIONARY STATEMENT(S)

P280-P273-P264-P304+P340+P310-
P301+P310+P330+P331-P305+
P351+P338+P310-P405-P501



Manufactured By :

**RAJ SPIRIT
SUPPLIERS**

H1-105, Udhog Vihar, Riico Industrial Area
Sukher, Udaipur, Rajasthan

**MIXING
RATIO** **2 : 1**

Batch :

Mfg. Dt. :


Net Weight :

M.R.P. :

(INCLUSIVE OF ALL TAXES)

For Professional & Industrial Use only

MADE IN INDIA

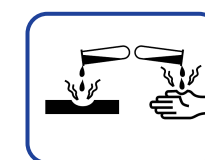



ROCKCURE

HARDENER

MANUAL 1011

PART B - 50%

HOW TO USE :

- Make sure the surface is dust and moisture free.
- Mix 2 parts of resin and 1 part hardener as per stoichiometric ratio i.e. 100 Kg : 50 Kg.
- Mix well before pouring onto slabs.
- Leave it for two hours in heat.

SAFETY INSTRUCTIONS :

1. Keep it away from eyes & skin.
2. Keep it protected from moisture.
3. Store in cool place.
4. Wear gloves and glasses while applying.

HAZARD STATEMENT(S)

H314-H411

PRECAUTIONARY STATEMENT(S)

P280-P273-P264-P304+P340+P310-
P301+P310+P330+P331-P305+
P351+P338+P310-P405-P501



Manufactured By :

**RAJ SPIRIT
SUPPLIERS**

H1-105, Udhog Vihar, Riico Industrial Area
Sukher, Udaipur, Rajasthan

**MIXING
RATIO** **2 : 1**

Batch :

Mfg. Dt. :


Net Weight :

M.R.P. :

(INCLUSIVE OF ALL TAXES)

For Professional & Industrial Use only

MADE IN INDIA

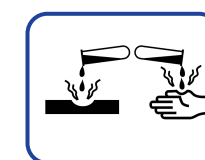



ROCKCURE

HARDENER UV

PART B - 50%

HOW TO USE :

- Make sure the surface is dust and moisture free.
- Mix 2 parts of resin and 1 part hardener as per stoichiometric ratio i.e. 100 Kg : 50 Kg.
- Mix well before pouring onto slabs.
- Leave it for two hours in heat.

SAFETY INSTRUCTIONS :

1. Keep it away from eyes & skin.
2. Keep it protected from moisture.
3. Store in cool place.
4. Wear gloves and glasses while applying.

HAZARD STATEMENT(S)

H314-H411

PRECAUTIONARY STATEMENT(S)

P280-P273-P264-P304+P340+P310-
P301+P310+P330+P331-P305+
P351+P338+P310-P405-P501



Manufactured By :

**RAJ SPIRIT
SUPPLIERS**

H1-105, Udhog Vihar, Riico Industrial Area
Sukher, Udaipur, Rajasthan

**MIXING
RATIO** **2 : 1**

Batch :

Mfg. Dt. :


Net Weight :

M.R.P. :

(INCLUSIVE OF ALL TAXES)

For Professional & Industrial Use only

MADE IN INDIA

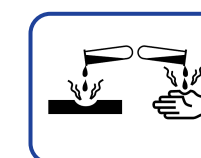



ROCKCURE

Converter Galaxy Black



HOW TO USE :

- Stone should Abrase with desired Abrasives.
- Apply the convertor on the desired stone in an longitudinal style.
- Leave it for next 2 hours.
- After the process apply ultra glow.

SAFETY INSTRUCTIONS :

1. Keep it away from eyes & skin.
2. Keep it protected from moisture.
3. Store in cool place.
4. Wear gloves and glasses while applying.
5. Shake well before use.
6. Close Tightly.
7. Keep in Cool Dry Place.

HAZARD STATEMENT(S)

H314-H411



PRECAUTIONARY STATEMENT(S)

P 2 8 0 - P 2 7 3 - P 2 6 4 -
P 3 0 4 + P 3 4 0 + P 3 1 0 -
P301+P310+P330+P331-P305+
P351+P338+P310-P405-P501

Manufactured By :

**RAJ SPIRIT
SUPPLIERS**

H1-105, Udhyog Vihar, Riico Industrial Area
Sukher, Udaipur, Rajasthan

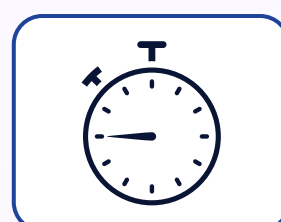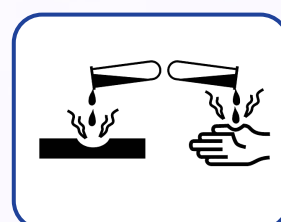

Batch :

Mfg. Dt. :

Net Weight :

M.R.P. :

(INCLUSIVE OF ALL TAXES)

For Professional & Industrial Use only

MADE IN INDIA



ROCKCURE

Converter N-Black



HOW TO USE :

- Stone should Abrase with desired Abrasives.
- Apply the convertor on the desired stone in an longitudinal style.
- Leave it for next 2 hours.
- After the process apply ultra glow.

SAFETY INSTRUCTIONS :

1. Keep it away from eyes & skin.
2. Keep it protected from moisture.
3. Store in cool place.
4. Wear gloves and glasses while applying.
5. Shake well before use.
6. Close Tightly.
7. Keep in Cool Dry Place.

HAZARD STATEMENT(S)

H314-H411



PRECAUTIONARY STATEMENT(S)

P 2 8 0 - P 2 7 3 - P 2 6 4 -
P 3 0 4 + P 3 4 0 + P 3 1 0 -
P301+P310+P330+P331-P305+
P351+P338+P310-P405-P501

Manufactured By :

**RAJ SPIRIT
SUPPLIERS**

H1-105, Udhyog Vihar, Riico Industrial Area
Sukher, Udaipur, Rajasthan

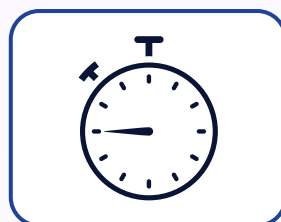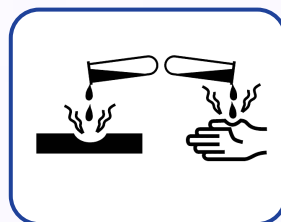

Batch :

Mfg. Dt. :

Net Weight :

M.R.P. :

(INCLUSIVE OF ALL TAXES)

For Professional & Industrial Use only

MADE IN INDIA



ROCKCURE

Converter 33LP



HOW TO USE :

- Stone should Abrase with desired Abrasives.
- Apply the convertor on the desired stone in an longitudinal style.
- Leave it for next 2 hours.
- After the process apply ultra glow.

SAFETY INSTRUCTIONS :

1. Keep it away from eyes & skin.
2. Keep it protected from moisture.
3. Store in cool place.
4. Wear gloves and glasses while applying.
5. Shake well before use.
6. Close Tightly.
7. Keep in Cool Dry Place.

HAZARD STATEMENT(S)

H314-H411



PRECAUTIONARY STATEMENT(S)

P 2 8 0 - P 2 7 3 - P 2 6 4 -
P 3 0 4 + P 3 4 0 + P 3 1 0 -
P301+P310+P330+P331-P305+
P351+P338+P310-P405-P501

Manufactured By :

**RAJ SPIRIT
SUPPLIERS**

H1-105, Udhyog Vihar, Riico Industrial Area
Sukher, Udaipur, Rajasthan

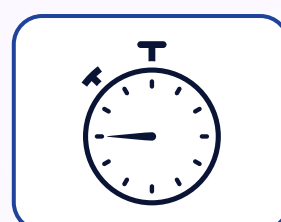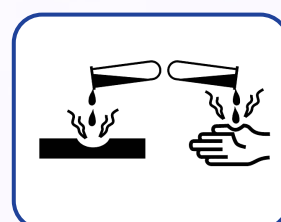

Batch :

Mfg. Dt. :

Net Weight :

M.R.P. :

(INCLUSIVE OF ALL TAXES)

For Professional & Industrial Use only

MADE IN INDIA



ROCKCURE

Converter Dark Brown



HOW TO USE :

- Stone should Abrase with desired Abrasives.
- Apply the convertor on the desired stone in an longitudinal style.
- Leave it for next 2 hours.
- After the process apply ultra glow.

SAFETY INSTRUCTIONS :

1. Keep it away from eyes & skin.
2. Keep it protected from moisture.
3. Store in cool place.
4. Wear gloves and glasses while applying.
5. Shake well before use.
6. Close Tightly.
7. Keep in Cool Dry Place.

HAZARD STATEMENT(S)

H314-H411


PRECAUTIONARY STATEMENT(S)

P 2 8 0 - P 2 7 3 - P 2 6 4 -
P 3 0 4 + P 3 4 0 + P 3 1 0 -
P301+P310+P330+P331-P305+
P351+P338+P310-P405-P501

Manufactured By :

**RAJ SPIRIT
SUPPLIERS**

H1-105, Udhyog Vihar, Riico Industrial Area
Sukher, Udaipur, Rajasthan

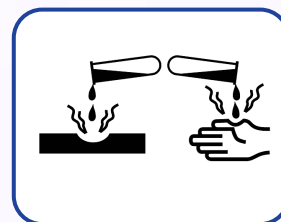

Batch :

Mfg. Dt. :

Net Weight :

M.R.P. :

(INCLUSIVE OF ALL TAXES)


For Professional & Industrial Use only

MADE IN INDIA



ROCKCURE

Converter Classic Brown

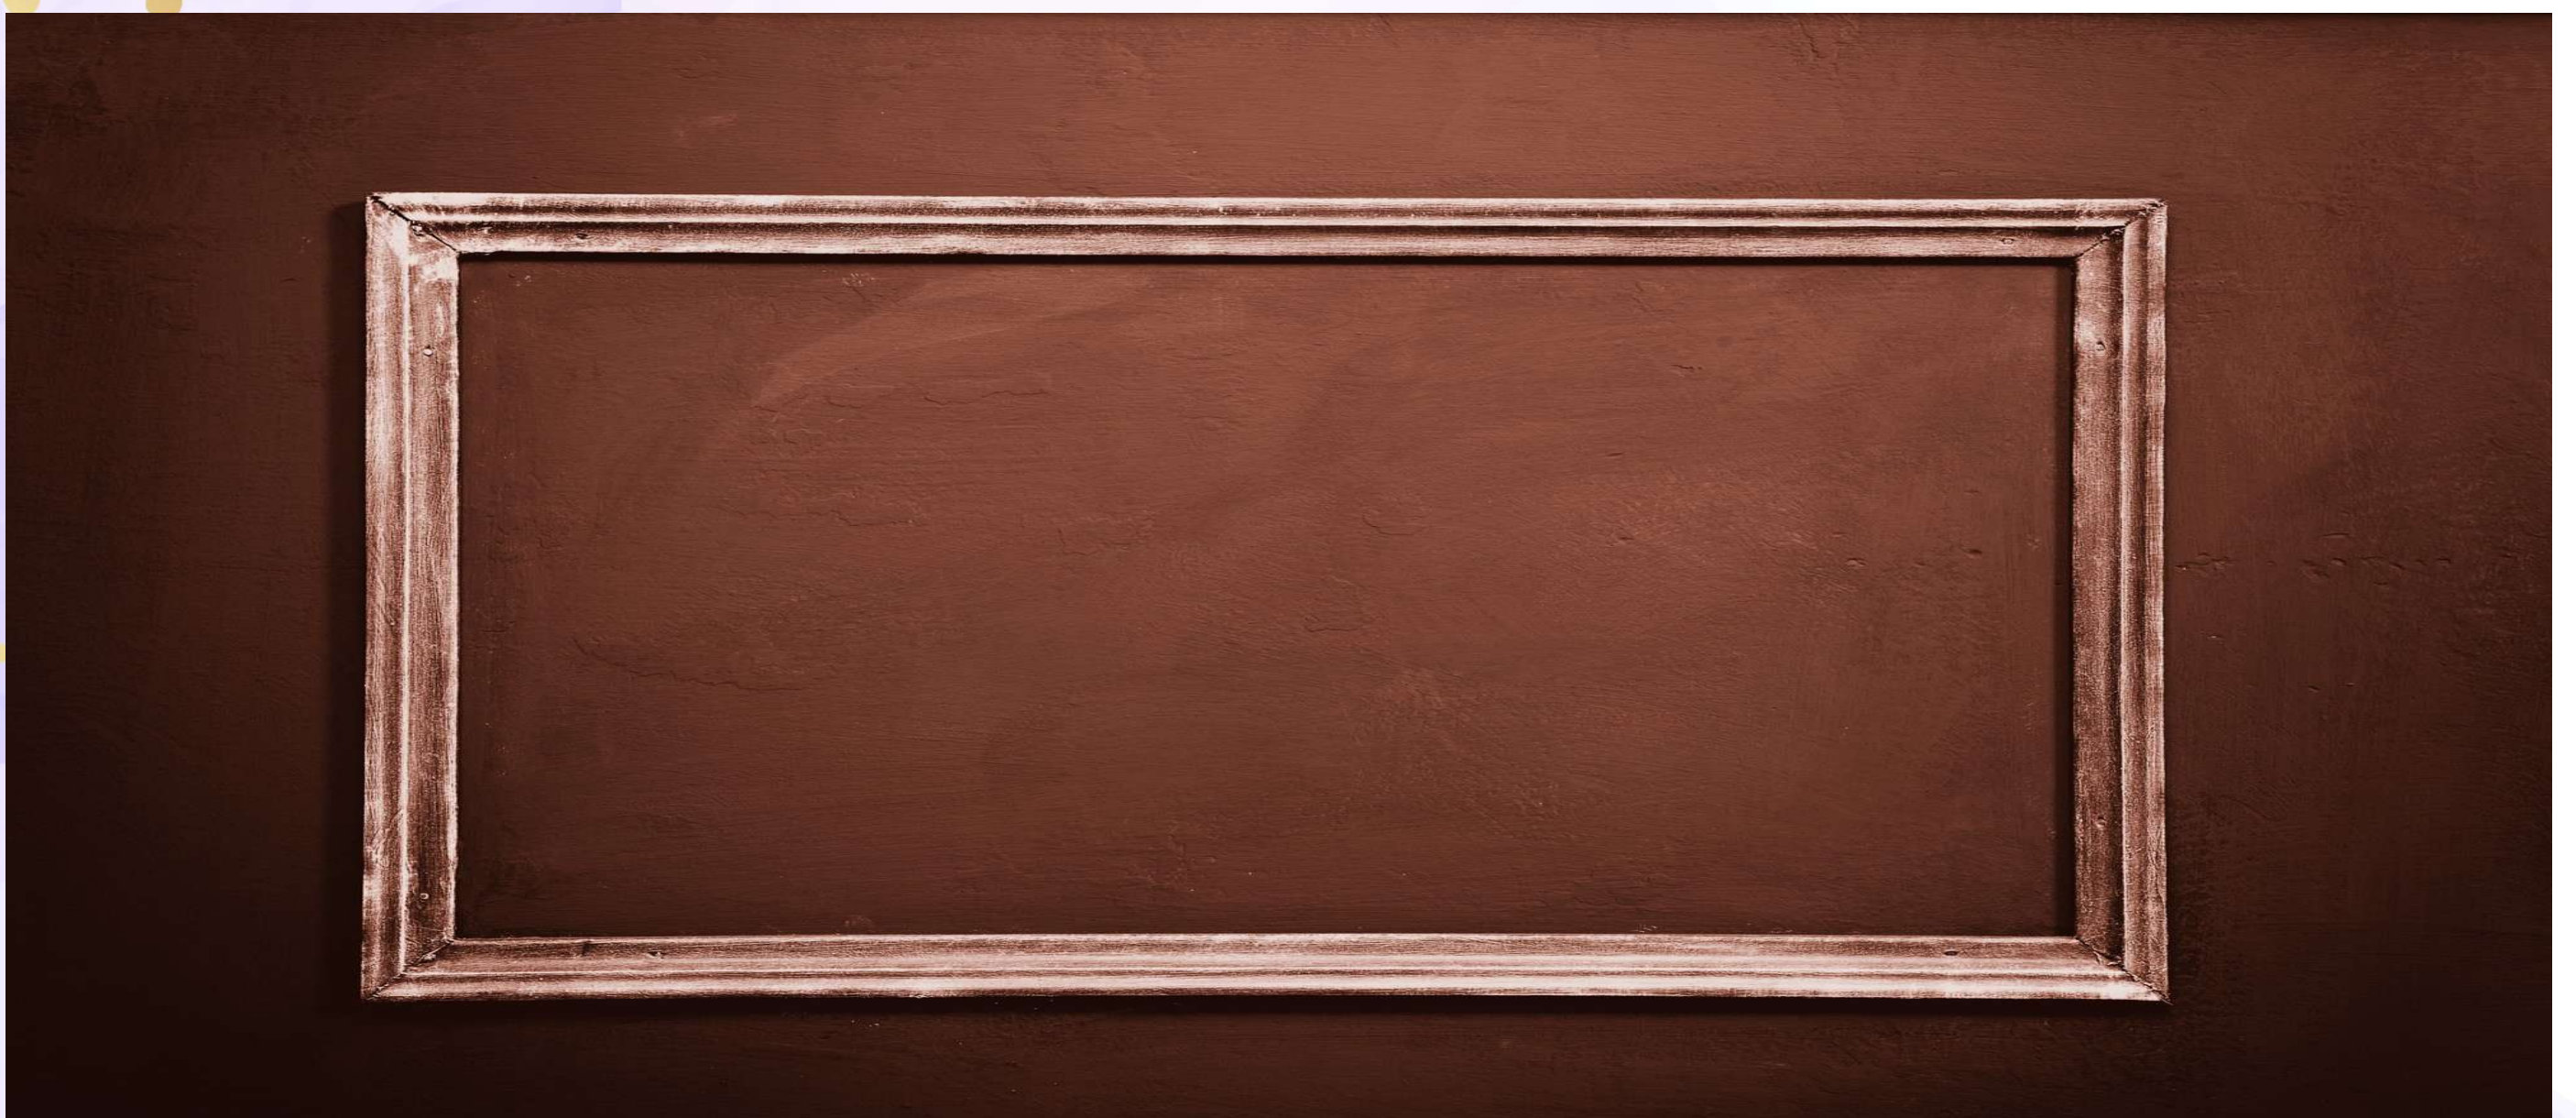

HOW TO USE :

- Stone should Abrase with desired Abrasives.
- Apply the convertor on the desired stone in an longitudinal style.
- Leave it for next 2 hours.
- After the process apply ultra glow.

SAFETY INSTRUCTIONS :

1. Keep it away from eyes & skin.
2. Keep it protected from moisture.
3. Store in cool place.
4. Wear gloves and glasses while applying.
5. Shake well before use.
6. Close Tightly.
7. Keep in Cool Dry Place.

HAZARD STATEMENT(S)

H314-H411



PRECAUTIONARY STATEMENT(S)

P 2 8 0 - P 2 7 3 - P 2 6 4 -
P 3 0 4 + P 3 4 0 + P 3 1 0 -
P301+P310+P330+P331-P305+
P351+P338+P310-P405-P501

Manufactured By :

**RAJ SPIRIT
SUPPLIERS**

H1-105, Udhyog Vihar, Riico Industrial Area
Sukher, Udaipur, Rajasthan

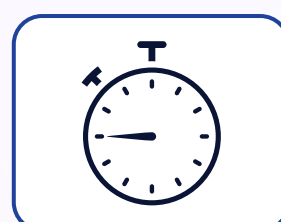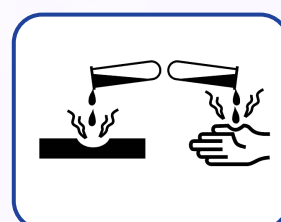

Batch :

Mfg. Dt. :

Net Weight :

M.R.P. :

(INCLUSIVE OF ALL TAXES)

For Professional & Industrial Use only

MADE IN INDIA



ROCKCURE

Converter Reddish Brown



HOW TO USE :

- Stone should Abrase with desired Abrasives.
- Apply the convertor on the desired stone in an longitudinal style.
- Leave it for next 2 hours.
- After the process apply ultra glow.

SAFETY INSTRUCTIONS :

1. Keep it away from eyes & skin.
2. Keep it protected from moisture.
3. Store in cool place.
4. Wear gloves and glasses while applying.
5. Shake well before use.
6. Close Tightly.
7. Keep in Cool Dry Place.

HAZARD STATEMENT(S)

H314-H411


PRECAUTIONARY STATEMENT(S)

P 2 8 0 - P 2 7 3 - P 2 6 4 -
P 3 0 4 + P 3 4 0 + P 3 1 0 -
P301+P310+P330+P331-P305+
P351+P338+P310-P405-P501

Manufactured By :

R **RAJ SPIRIT
SUPPLIERS**

H1-105, Udhyog Vihar, Riico Industrial Area
Sukher, Udaipur, Rajasthan

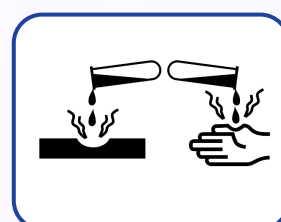

Batch : :

Mfg. Dt. : :

Net Weight : :

M.R.P. : :

(INCLUSIVE OF ALL TAXES)

For Professional & Industrial Use only

MADE IN INDIA



ROCKCURE

Converter O-Red



HOW TO USE :

- Stone should Abrase with desired Abrasives.
- Apply the convertor on the desired stone in an longitudinal style.
- Leave it for next 2 hours.
- After the process apply ultra glow.

SAFETY INSTRUCTIONS :

1. Keep it away from eyes & skin.
2. Keep it protected from moisture.
3. Store in cool place.
4. Wear gloves and glasses while applying.
5. Shake well before use.
6. Close Tightly.
7. Keep in Cool Dry Place.

HAZARD STATEMENT(S)

H314-H411


PRECAUTIONARY STATEMENT(S)

P 2 8 0 - P 2 7 3 - P 2 6 4 -
P 3 0 4 + P 3 4 0 + P 3 1 0 -
P301+P310+P330+P331-P305+
P351+P338+P310-P405-P501

Manufactured By :

**RAJ SPIRIT
SUPPLIERS**

H1-105, Udhyog Vihar, Riico Industrial Area
Sukher, Udaipur, Rajasthan

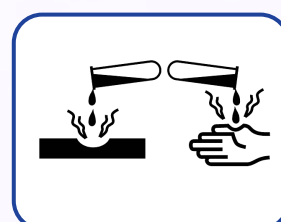

Batch :

Mfg. Dt. :

Net Weight :

M.R.P. :

(INCLUSIVE OF ALL TAXES)

For Professional & Industrial Use only

MADE IN INDIA



R O C K C U R E

MORE GLOW RESIN PLAIN

HOW TO USE :

- Stone should Abrase with desired Abrasives.
- Apply the convertor on the desired stone in an longitudinal style.
- Leave it for next 2 hours.
- After the process apply ultra glow.

SAFETY INSTRUCTIONS :

1. Keep it away from eyes & skin.
2. Keep it protected from moisture.

3. Store in cool place.
4. Wear gloves and glasses while applying.
5. Shake well before use.
6. Close Tightly.
7. Keep in Cool Dry Place.

HAZARD STATEMENT(S)





H314-H411

PRECAUTIONARY STATEMENT(S)

P280-P273-P264-
P304+P340+P310-
P301+P310+P330+P331-P305+
P351+P338+P310-P405-P501

Manufactured By :

**RAJ SPIRIT
SUPPLIERS**

H1-105, Udh yog Vihar, Riico Industrial Area
Sukher, Udaipur, Rajasthan    

Batch :
Mfg. Dt. :
Net Weight :
M.R.P. :
(INCLUSIVE OF ALL TAXES)

For Professional & Industrial Use only

MADE IN INDIA



R O C K C U R E

SUPER GLOW RESIN PLAIN

HOW TO USE :

- Stone should Abrase with desired Abrasives.
- Apply the convertor on the desired stone in an longitudinal style.
- Leave it for next 2 hours.
- After the process apply ultra glow.

SAFETY INSTRUCTIONS :

1. Keep it away from eyes & skin.
2. Keep it protected from moisture.

3. Store in cool place.
4. Wear gloves and glasses while applying.
5. Shake well before use.
6. Close Tightly.
7. Keep in Cool Dry Place.

HAZARD STATEMENT(S)





H314-H411

PRECAUTIONARY STATEMENT(S)

P280-P273-P264-
P304+P340+P310-
P301+P310+P330+P331-P305+
P351+P338+P310-P405-P501

Manufactured By :

**RAJ SPIRIT
SUPPLIERS**

H1-105, Udh yog Vihar, Riico Industrial Area
Sukher, Udaipur, Rajasthan    

Batch :
Mfg. Dt. :
Net Weight :
M.R.P. :
(INCLUSIVE OF ALL TAXES)

For Professional & Industrial Use only

MADE IN INDIA



R O C K C U R E

SUPER GLOW RESIN BLACK

HOW TO USE :

- Stone should Abrase with desired Abrasives.
- Apply the convertor on the desired stone in an longitudinal style.
- Leave it for next 2 hours.
- After the process apply ultra glow.

SAFETY INSTRUCTIONS :

1. Keep it away from eyes & skin.
2. Keep it protected from moisture.

3. Store in cool place.
4. Wear gloves and glasses while applying.
5. Shake well before use.
6. Close Tightly.
7. Keep in Cool Dry Place.

HAZARD STATEMENT(S)






H314-H411

PRECAUTIONARY STATEMENT(S)

P280-P273-P264-
P304+P340+P310-
P301+P310+P330+P331-P305+
P351+P338+P310-P405-P501

Manufactured By :

**RAJ SPIRIT
SUPPLIERS**

H1-105, Udh yog Vihar, Riico Industrial Area
Sukher, Udaipur, Rajasthan     

Batch :
Mfg. Dt. :
Net Weight :
M.R.P. :
(INCLUSIVE OF ALL TAXES)

For Professional & Industrial Use only

MADE IN INDIA



ROCKCURE

SUPER GLOW RESIN REDDISH BROWN

HOW TO USE :

- Stone should Abrase with desired Abrasives.
- Apply the convertor on the desired stone in an longitudinal style.
- Leave it for next 2 hours.
- After the process apply ultra glow.

SAFETY INSTRUCTIONS :

1. Keep it away from eyes & skin.
2. Keep it protected from moisture.

3. Store in cool place.
4. Wear gloves and glasses while applying.
5. Shake well before use.
6. Close Tightly.
7. Keep in Cool Dry Place.

HAZARD STATEMENT(S)





H314-H411

PRECAUTIONARY STATEMENT(S)

P280-P273-P264-
P304+P340+P310-
P301+P310+P330+P331-P305+
P351+P338+P310-P405-P501

Manufactured By :

**RAJ SPIRIT
SUPPLIERS**

H1-105, Udhyog Vihar, Riico Industrial Area
Sukher, Udaipur, Rajasthan    

Batch :
Mfg. Dt. :
Net Weight :
M.R.P. :
(INCLUSIVE OF ALL TAXES)

For Professional & Industrial Use only

MADE IN INDIA



ROCKCURE

MORE GLOW HARDENER PLAIN

HOW TO USE :

- Stone should Abrase with desired Abrasives.
- Apply the convertor on the desired stone in an longitudinal style.
- Leave it for next 2 hours.
- After the process apply ultra glow.

SAFETY INSTRUCTIONS :

1. Keep it away from eyes & skin.
2. Keep it protected from moisture.

3. Store in cool place.
4. Wear gloves and glasses while applying.
5. Shake well before use.
6. Close Tightly.
7. Keep in Cool Dry Place.

HAZARD STATEMENT(S)

H314-H411

PRECAUTIONARY STATEMENT(S)

P280-P273-P264-
P304+P340+P310-
P301+P310+P330+P331-P305+
P351+P338+P310-P405-P501

Manufactured By :

**RAJ SPIRIT
SUPPLIERS**

H1-105, Udh yog Vihar, Riico Industrial Area
Sukher, Udaipur, Rajasthan

Batch :
Mfg. Dt. :
Net Weight :
M.R.P. :
(INCLUSIVE OF ALL TAXES)

For Professional & Industrial Use only

MADE IN INDIA



R O C K C U R E

SUPER GLOW HARDENER PLAIN

HOW TO USE :

- Stone should Abrase with desired Abrasives.
- Apply the convertor on the desired stone in an longitudinal style.
- Leave it for next 2 hours.
- After the process apply ultra glow.

SAFETY INSTRUCTIONS :

1. Keep it away from eyes & skin.
2. Keep it protected from moisture.

3. Store in cool place.
4. Wear gloves and glasses while applying.
5. Shake well before use.
6. Close Tightly.
7. Keep in Cool Dry Place.

HAZARD STATEMENT(S)






H314-H411

PRECAUTIONARY STATEMENT(S)

P280-P273-P264-
P304+P340+P310-
P301+P310+P330+P331-P305+
P351+P338+P310-P405-P501

Manufactured By :

**RAJ SPIRIT
SUPPLIERS**

H1-105, Udh yog Vihar, Riico Industrial Area
Sukher, Udaipur, Rajasthan     

Batch :
Mfg. Dt. :
Net Weight :
M.R.P. :
(INCLUSIVE OF ALL TAXES)

For Professional & Industrial Use only

MADE IN INDIA



ROCKCURE

SUPER GLOW HARDENER REDDISH BROWN

HOW TO USE :

- Stone should Abrase with desired Abrasives.
- Apply the convertor on the desired stone in an longitudinal style.
- Leave it for next 2 hours.
- After the process apply ultra glow.

SAFETY INSTRUCTIONS :

1. Keep it away from eyes & skin.
2. Keep it protected from moisture.

3. Store in cool place.
4. Wear gloves and glasses while applying.
5. Shake well before use.
6. Close Tightly.
7. Keep in Cool Dry Place.

HAZARD STATEMENT(S)






H314-H411

PRECAUTIONARY STATEMENT(S)

P280-P273-P264-
P304+P340+P310-
P301+P310+P330+P331-P305+
P351+P338+P310-P405-P501

Manufactured By :

 **RAJ SPIRIT
SUPPLIERS**

H1-105, Udh yog Vihar, Riico Industrial Area
Sukher, Udaipur, Rajasthan     

Batch :
Mfg. Dt. :
Net Weight :
M.R.P. :
(INCLUSIVE OF ALL TAXES)

For Professional & Industrial Use only

MADE IN INDIA



R O C K C U R E

SUPER GLOW HARDENER BLACK

HOW TO USE :

- Stone should Abrase with desired Abrasives.
- Apply the convertor on the desired stone in an longitudinal style.
- Leave it for next 2 hours.
- After the process apply ultra glow.

SAFETY INSTRUCTIONS :

1. Keep it away from eyes & skin.
2. Keep it protected from moisture.

3. Store in cool place.
4. Wear gloves and glasses while applying.
5. Shake well before use.
6. Close Tightly.
7. Keep in Cool Dry Place.

HAZARD STATEMENT(S)






H314-H411

PRECAUTIONARY STATEMENT(S)

P280-P273-P264-
P304+P340+P310-
P301+P310+P330+P331-P305+
P351+P338+P310-P405-P501

Manufactured By :

**RAJ SPIRIT
SUPPLIERS**

H1-105, Udh yog Vihar, Riico Industrial Area
Sukher, Udaipur, Rajasthan     

Batch :
Mfg. Dt. :
Net Weight :
M.R.P. :
(INCLUSIVE OF ALL TAXES)

For Professional & Industrial Use only

MADE IN INDIA